

# Tips, advice and <sup>we</sup>care

Congratulations on your new Nordic Heat® Vest

## IMPORTANT INFORMATION - BATTERY

- Consequently, any new battery should never be used before it has been completely charged.
- To ensure maximum battery life, it should be completely charged and discharged during the first 8-10 times.
- Remove the battery from the clothing when no longer required.
- The battery must be "summer-stored" in 100% charged condition, do to the built in security print that monitors the cellvoltage, it discharges over a longer period (apox. 1-2 pr. month).
- Make sure that the battery is always fully charged before storage or use.

Whenever you dress up in this product, avoid any unnecessary stretching or pulling of the material in order not to damage the internal wiring system.

## Charger

- For proper and safe use and charging – make sure that only the supplied Nordic Heat charger and battery are used.
- Red light= charging, Green light= fully charged.

## Storage

- Charge the battery 100% before long lasting storage - Recharge at least twice a year.
- Always store in a cool and dry place, away from sources of strong heat or open fire.
- Li-on batteries, like any other battery will in time also undergo reduction of charging capacity. Our batteries guaranteed to last +500 charging cycles.



Nordic Heat ApS · Kratbjerg 240 · DK-3480 Fredensborg · +45 2717 0000  
Service@NordicHeat.dk · NordicHeat.dk - Nordic-heat.com

## Air transport / travel:

Never put the batteries in your suitcase  
- must ALWAYS be carried in the hand luggage.

## Protect the environment

Always dispose the battery at recycle station or in an approved battery box.

## Wash & Care

- Handwash and spot clean followed by hang drying.
- Machine wash 30° gentle cycle using washbag with light spin only.
- No fabric softener.
- No wringing or twisting of the clothes.
- Always remove battery before washing :-)

## Safety Warnings

- The clothes are not to be worn in a wet condition.
- For the safety and protection of the electronic parts, needles or pointed objects are not to be inserted in the clothes.
- Keep clothes away from fire or excessive heat.
- When you remove the battery from the pocket, grab the plug and turn it clock- and counter wise while pulling gently, avoid pulling the cord.

## Warranty

- Subject to normal usage, Nordic Heat® extends an all-inclusive 2-year warranty. Damage to fabric, wiring connections, or battery by misuse, accidents, fire, water, any unauthorized service or negligence is not covered.
- All repairs must be executed by Nordic Heat® Service Center, which invite you always to telephone ahead with your problem. Should Customer Service be unable to solve the matter on the telephone, the items in questions are to be forwarded to the Service Center.

Best regards  
The Nordic Heat Team



## DEAR CUSTOMER - THANKS !

Thank you for taking the time to read this brief, but important user guidance. By reading and following it, you ensure optimal benefits of your Nordic Heat product.



## IMPORTANT INFORMATION! Storage and use of Nordic Heat Lithium-ion batteries

Never use the new battery before it has been charged 100%.

When charging, the charger light is red and turns green when fully charged.

Whenever the battery are to be stored during the summer, make sure that it is fully charged. Once again when the season starts, it is important that the battery is fully charged before use. This will maintain the battery memory, extend the durability and provide you maximum capacity.

## Nordic Heat® – Product optimization

Generally, turn on the heating PRIOR being cold, because the technology is designed to keep you warm, and not for warming you up.

If you have any questions, please contact our service team at [service@nordicheat.dk](mailto:service@nordicheat.dk) or +45 2717 0000

Enjoy your Nordic Heat® product.

Best regards  
The Nordic Heat Team

 
The premium choice of Your  
Game Changing Technology

**NORDIC | HEAT®**  
STAY WARM AND FOCUSED



# User manual - Nordic Heat® 7,4V Battery Heated Vest

## Charge battery before use

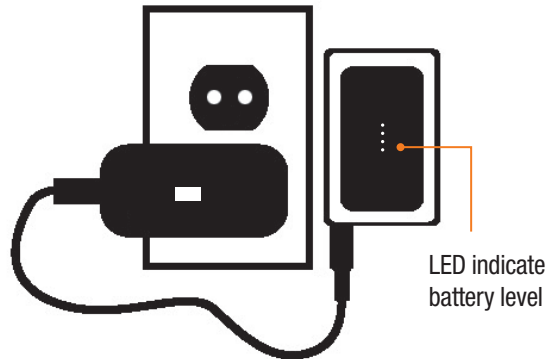

**Red light** – Battery charging  
**Green light** – Battery fully charged



 
Battery pocket

To turn on / off:  
press the button lightly for 2 seconds



The easy accessible control button manages the on / off function and the desired heat level

To turn on / off:  
press the button lightly for 2 seconds

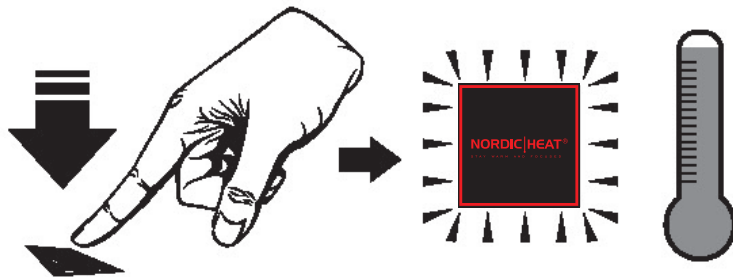

When the clothing is turned on, it starts up at red light, to change temperature, simply press lightly on the button

**Red light = High • Yellow light = Medium • Green light = Low**

2 hours

 
**Red light**



High

Heating time approx.:  
4 hours

**Yellow light**



Medium

6 hours

**Green light**



Low

Red/high light get's very hot!  
- we recommend max. 10 min. at a time.