

Whenever you dress up in this product, avoid any unnecessary stretching or pulling of the material in order not to damage the internal wiring system.

IMPORTANT INFORMATION - BATTERIES

- Consequently, any new battery should never be used before it has been completely charged.
- To ensure maximum battery life, it should be completely charged and discharged during the first 8-10 times.
- Remove the batteries from the product when no longer required.
- The battery must be "summer-stored" in 100% charged condition, do to the built in security print that monitors the cellvoltage, it discharges over a longer period.
- Make sure that the batteries is always fully charged before storage or use.

Charger

- For proper and safe use and charging – make sure that only the supplied Nordic Heat® charger and batteries used.
- Red light= is charging, Green light= fully charged.

Storage

- Charge the battery 100% before long lasting storage - Recharge at least twice a year.
- Always store in a cool and dry place, away from sources of strong heat or open fire.
- Li-on batteries, like any other battery will in time also undergo reduction of charging capacity. Our batteries are guaranteed to last +500 charging cycles.

Air transport / travel:

Never put the batteries in your suitcase
- must ALWAYS be carried in the hand luggage.

Protect the environment

Always dispose the battery at recycle station or in an approved battery box.

Wash & Care

- Handwash and spot clean followed by hang drying.
- Machine wash 30° gentle cycle using washbag with light spin only.
- No fabric softener.
- No wringing or twisting of the product.
- Always remove battery before washing :-)


Safety Warnings

- The clothes are not to be worn in a wet condition.
- For the safety and protection of the electronic parts, needles or pointed objects are not to be inserted in the gloves.
- Keep it away from fire or excessive heat.
- When you remove the battery from the pocket, grab the plug and turn it clock- and counter wise while pulling gently, avoid pulling the cord.

Warranty

- Subject to normal usage, Nordic Heat® extends an all-inclusive 2-year warranty. Damage to fabric, wiring connections, or battery by misuse, accidents, fire, water, any unauthorized service or negligence is not covered.
- All repairs must be executed by Nordic Heat® Service Center, which invite you always to telephone ahead with your problem. Should Customer Service be unable to solve the matter on the telephone, the items in questions are to be forwarded to the Service Center.

Best regards
The Nordic Heat® Team

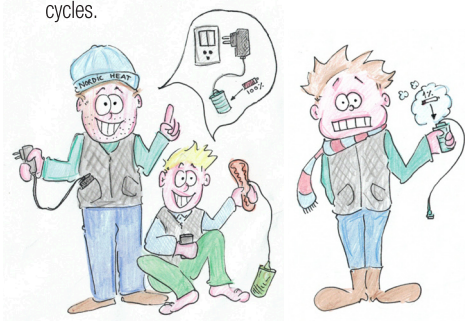

DEAR CUSTOMER

Thank you for taking the time to read this brief, but important user guidance. By reading and following it, you ensure optimal benefits of your Nordic Heat products.



IMPORTANT INFORMATION!

Storage and use of Nordic Heat® Lithium-ion batteries

Never use the new battery before it has been charged 100%.

When charging, the charger light is red and turns green when fully charged.

When charging both batteries, make sure that the charger is constantly lit red. The charger flashes when only one battery is connected.

If the charger flashes towards the end of the charge (approx. 3 hours), one battery is fully charged - just wait for the constant green light.

Whenever the batteries are to be stored during the summer, make sure they are fully charged. Once again when the season starts, it is important that the batteries are fully charged before use. This will maintain the battery memory, extend the durability and provide you maximum capacity.

Nordic Heat® – Product optimization

It is beneficial to switch the setting to RED for a few minutes before use and then reducing to yellow or green, this will help prolong the battery life significantly. Warm hands, in heated gloves - is your best starting point.

If you have any questions please contact our service team at
service@nordicheat.dk or +45 2717 0000


Enjoy your Nordic Heat® product.

Best regards
The Nordic Heat® Team

The premium choice of Your
Game Changing Technology

User manual - Nordic Heat® battery heated Gloves and Mittens

Charge batteries before use

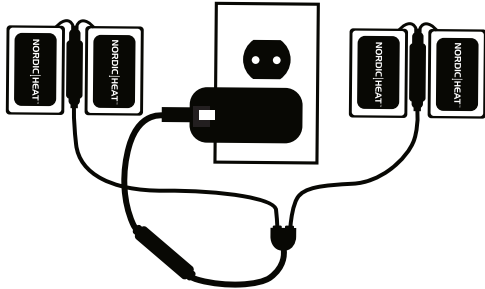

Red light – Charging

Green light – Fully charged

Blinking light – one battery is fully charged, await for constant green light




To turn on / off:
press the button lightly for 2 seconds



The easy accessible control button manages the on / off function and the desired heat level

To turn on / off:
press the button lightly for 2 seconds

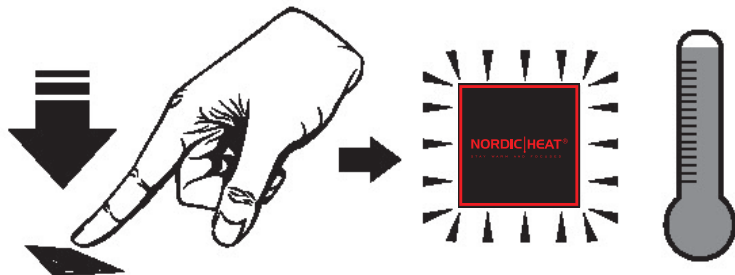

When the clothing is turned on, it starts up at red light, to change temperature, simply press lightly on the button

Red light = High • Yellow light = Medium • Green light = Low

Heating time approx.:

1800:
2 hours

2600:
3 hours

Red light



1800:
4 hours

2600:
6 hours

Yellow light



1800:
6 hours

2600:
9 hours

Green light

